

Mini Washing Machine

User's manual

HydroGenic

This manual is for
A P18

- Please read this manual carefully before using.
- Retain it for future reference.
- The machine is for cold water connection only.

HydroGenic

0030807309

Contents

Packing list.....the 2nd cover

Names of the parts.....1

Safety precautions2

Installation and adjustment4

Preparation before washing5

Putting clothes in6

Usage of the detergent.....6

 
Process washing.....7

Disposal after washing8


Trouble shooting9

Specifications.....9



Packing list

Name	Quantity
● User's manual	● One
● Warranty manual	● One
● Water inlet hose 	● One
● Washing machine	● One

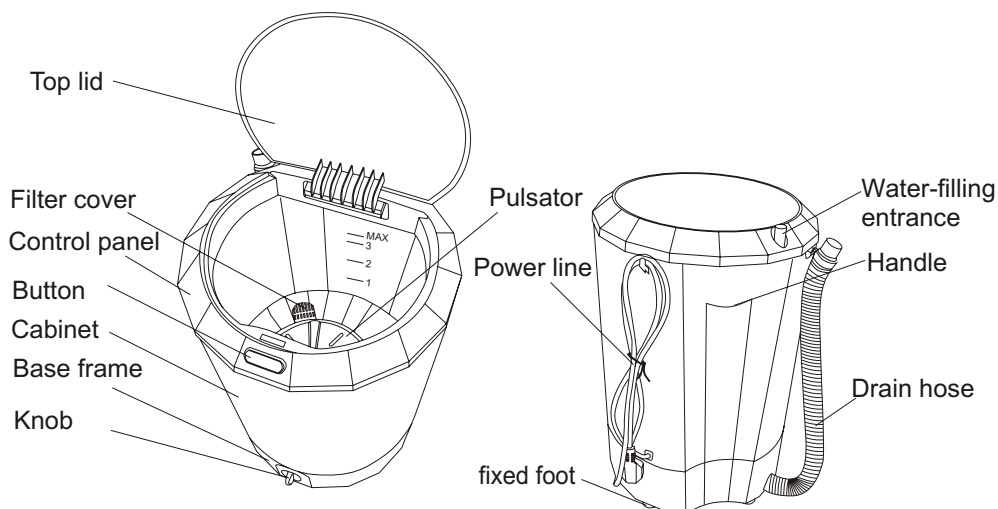 Names of the parts




Meaning and description of the symbols

<p>Warning sign</p> 	<p>Contents marked with this symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the instructions, otherwise it may cause damage to the machine or endanger the personal safety of the user.</p>
<p>Forbidden sign</p> 	<p>Contents marked with this symbol are actions forbidden to perform. Performing of those actions may result in destruction of the machine or permanent injury to the user.</p>

Safety precautions

 Please plug the washer into a 220V-240V a.c receptacle. Be sure to use single-phase three pin receptacle. Ensure the earthing prong of the power receptacle is earthed reliably. Use leakage protector if possible.

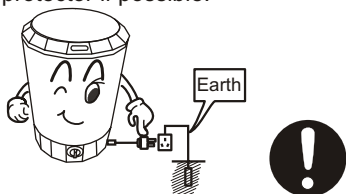

In normal usage of the washing machine, the power plug should be ready to be pulled out easily. Be sure to pull the plug out and close the water faucet in following cases: power failure, installing the machine, leaving the machine idle or cleaning the machine. Do not push or pull the power plug with wet hand.


If the appliance is supplied from an extension cord or electrical portable outlet device the plug should be positioned so it is not subject to splashing or ingress of moisture.



Do not twist pinch or otherwise damage the cord, if the cord or plug becomes damaged. Return the unit to the supplier for repair.




Do not put the machine in damp places like the bathroom. Never wash it with water. Do not put wet clothes on the control panel.

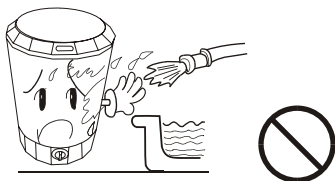

Do not use water hotter than 50°C.




If the washing machine is installed on carpet, do not block the ventilation hole with carpet.

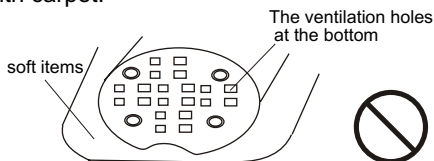

Do not wash water-proof items like the raincoat, bike covers etc.



Do not let the machine share one power point with other electric appliances. If the power plug is damaged or loose, do not use the plug any more.

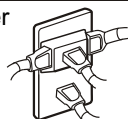

Safety precautions

Do not put your hands into the working area of the machine. It is dangerous even if the rotation is slow. Take special care of children. Do not let children climb on the washing machine.



Do not repair or alter the machine by yourself.



 
Do not put any hot or heavy items on the washing machine.




Do not wash clothes with volatile materials (such as thinner, petrol etc.)



Do not allow children to use the washing machine.

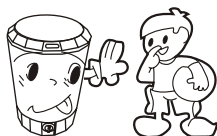

Keep the machine away from direct sunlight and heat sources.

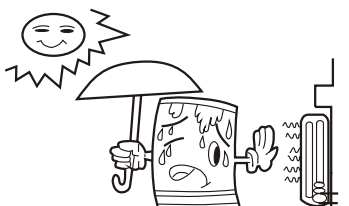


Installation and adjustment

Please install and adjust the machine according to the requirement of the manual. It is very important to your safety and correct operating the machine.


Usage of the drain hose

The drain hose shall drain smoothly


1. The height of the drain hose shall be less than 10cm, or the drainage will not be smooth.

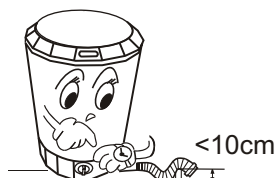

2. Do not trample or press the drain hose.

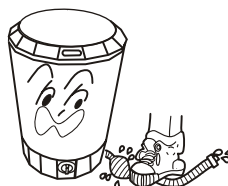


3. Do not lengthen or cut down the drain hose.

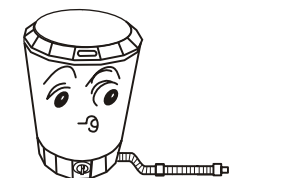



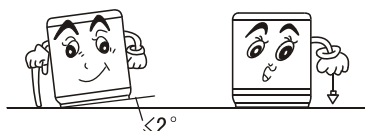

Adjust the installation position

The largest allowed slope of the base of the machine is 2° . More than this will result in unstable running or stoppage of the machine.



Preparation before washing

Pay attention to the following before washing.

Check if your laundry has special washing requirements.	Clear the pockets. Take out the coins ,keys, hairpins etc.	Fasten the buttons and zippers.	The quantity of the clothes shall not exceed the rated value. The large clothes like jeans should be put in loosely.	When the pulsator is running , the buttons on the clothes may cause noise. To avoid this turn clothes that have buttons inside-out.
				

A.Please check if the clothes are applicable for washing.
b.Separate those that are not colorfast from other washing.
c.For laundries that are not water absorbing, please push them into the water with your hands.
d.For very dirty clothes,it is easier to remove most of the loose soiling before washing.
e.For laundries likely to get lint ball or with long fibers, first turn them inside out before putting them into the water.
F.Do not put clothes polluted with chemicals directly into the washing machine.
g.For those small clothes likely to be twisted or worn, and woollen clothes, please put them into a mesh bag before washing.

Reference weight of the laundries:



● Pyjamas
(about 200g)



● shirt
(cotton, about 300g)



● underpants
(cotton, about 70g)



● undershirt
(cotton, about 180g)



● Socks
(blend, about 50g)

Put in the laundries



- The capacity of washing of the machine refer to the largest weight of the standard clothes under dry condition that can be washed in one time. The largest capacity of this machine is 1.5kg.
- The thickness, size and type of the cloth will influence the actual washing capacity.
- Do not select "High" water level for a small amount of clothes, so as to avoid splashing water.

Usage of the detergent

How to use the whitener

- Fill water to decided level. Dilute the whitener and pour it slowly into the washing tub.
- Avoid using whitener on laundries with color or patterns as they are prone to lose color.
- The whitener should not touch the laundries directly.
- Refer to the user's manual for the usage and quantity of the whitener.
- For powder whitener, please dissolve it before use.

How to use the washing powder

- Powder dissolved in the machine
 1. Fill water to "1" water level.
 2. Add the powder. Run for 30 seconds to dissolve it completely.
 3. Put in the clothes. Select suitable water level.
- Soap flakes
 1. Prepare warm water of 30°C in a container.
 2. Add the powder while stirring to fully dissolve it.
- Put in the proper quantities detergent according to the water level and the washing quantities.
- It is suggested not to use high sudsing detergent.
- Washing powder of poor quality or powder that is old may be caked.

Process washing

When the washing machine is to be connected to the water mains .


1.Put in the laundry and detergent,then fill with this correct amount of washer.

Install the water inlet hose

Insert the water inlet hose into the water-filling entrance on the control panel.

NOTE


- 1.Confirm that the drain hose is properly stowed before filling with water, or the water will flow through the drain hose.
2. Inside the machine you will see water filling levels-"1", "2", "3"and"MAX". This relates to the amount of washing you are doing. Never exceed the "MAX"Mark!
3. When the washing machine is to be connected to the water mains using the new hose-sets and that the old hose-sets should not be used.

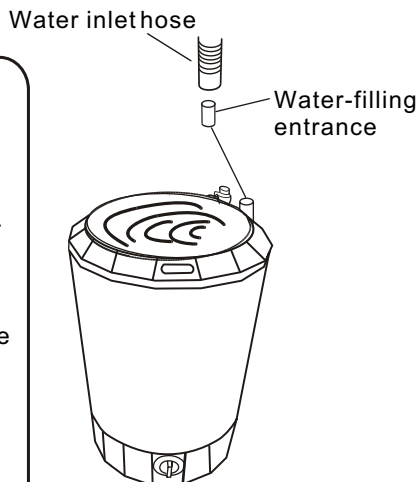

2.Close the top lid

3.Connect the powerline


Confirm that the washing machine is earthed reliably. Then insert the power plug into the receptacle. Do not connect the earth terminal to the gas pipe and tap water pipe.

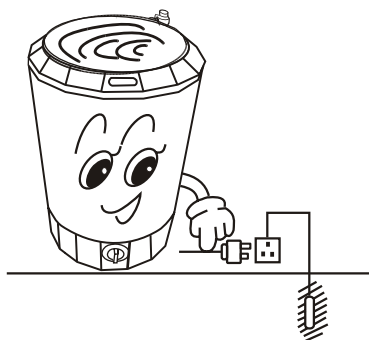

4.Washing duration reference

Select washing duration depending on the laundry

Laundry	Washing Duration(min)
Silk fabric(thin laundry)	About2~4
Knitted fabric/man-made fabric	About3~6
Bed sheet	About7~8
Cotton, blending or linen fabrics	About8~10
Very dirty or heavy laundry	About10~15

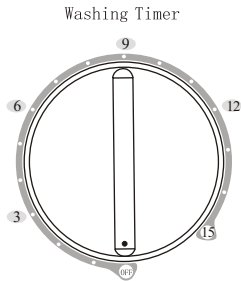

When you set 2 minutes or less,you need to adjust it over 6 minutes then turn back.

5.Finish washing

- The tumbler stops revolving.Level the draining hose down to let the waste water out.



Disposal after washing

- After washing, close the water faucet. (If needed, you can dismantle the water inlet hose).
- Do not store water in the washing machine for a long period. Drain the water completely after each using.
- Be sure to pull off the power plug before maintenance.
- Hang up the power cord and drain hose.
- Wipe off the water drops on the surface of the machine and inside the tub. Open the top lid for some time (about 1 hour), then close the top lid.

If the cabinet is dirty, wipe it with wet cloth

- Do not flush it directly with water.
- Wipe it with neutral detergent.
- Do not wipe it with thinner, petrol, alcohol etc.



Trouble shooting

If you experience trouble with your HYDRO-GENIC. Please pull out the plug before checking anything. The following table may help in troubleshooting. If there is still a problem, return the unit to your supplier for help.

Phenomena	How to settle
The machine does not act	<ul style="list-style-type: none">● Is there power failure? — Use it when the power is on.● Is the power plug loose? — Insert the power plug tightly.
There's abnormal sound inside the machine	<ul style="list-style-type: none">● Is the machine slanting? — Level the machine properly.● Are there some metal foreign bodies in a tub? — Remove the metal foreign bodies

Specifications

Water level/ Water quantity (L)	3/17 2/12 1/7
Water inlet pressure (MPa)	0.02~0.2
Rated washing capacity (kg)	1.5

